




## SUPER EYEBOLT SAFETY PRECAUTIONS

**WARNING: PRIOR TO USING ANY HOIST RING, PLEASE READ THE FOLLOWING FOR PROPER INSTALLATION AND USAGE.**

As with all mechanical devices, regular inspection for wear and strict adherence to use instruction is necessary to prevent misuse failure.

- Despite the 5:1 safety factor, **NEVER EXCEED THE RATED LOAD CAPACITY**. This safety margin is needed in case of misuse, which could drastically lower load capacity.
- Mount flush and tight on plate. **DO NOT LEAVE GAP/SPACE BETWEEN BASE AND MOUNTING SURFACE**.
- Tensile strength of parent material should be above 58,000 PSI to achieve full load rating.
- **AVOID SHOCK LOADS**. Lift gradually.

**CAUTION: Rated capacity is for straight lifts. Angle lifts should be avoided. Load limits are reduced by as much as 80% on angle lifts**

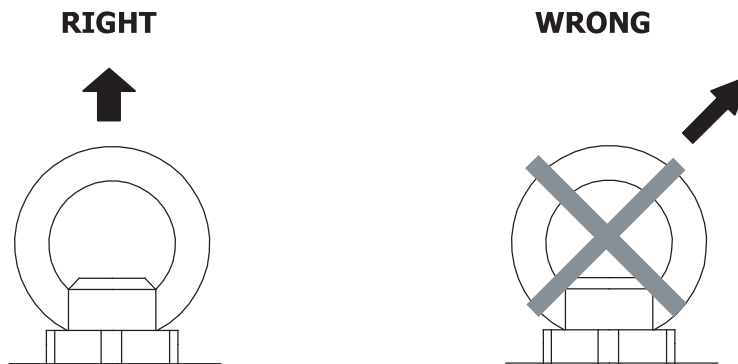

**CAUTION: HOIST RING MUST BE FIRMLY SECURED TO OBJECT BEING LIFTED**